


# INSTRUCTION MANUAL

## LOFT COLLECTION C88815-AB/BK

VINCI  
LIGHTING

1. Always ensure the power is completely OFF before any installation or maintenance.
2. The fixture must be installed by a qualified licensed electrician

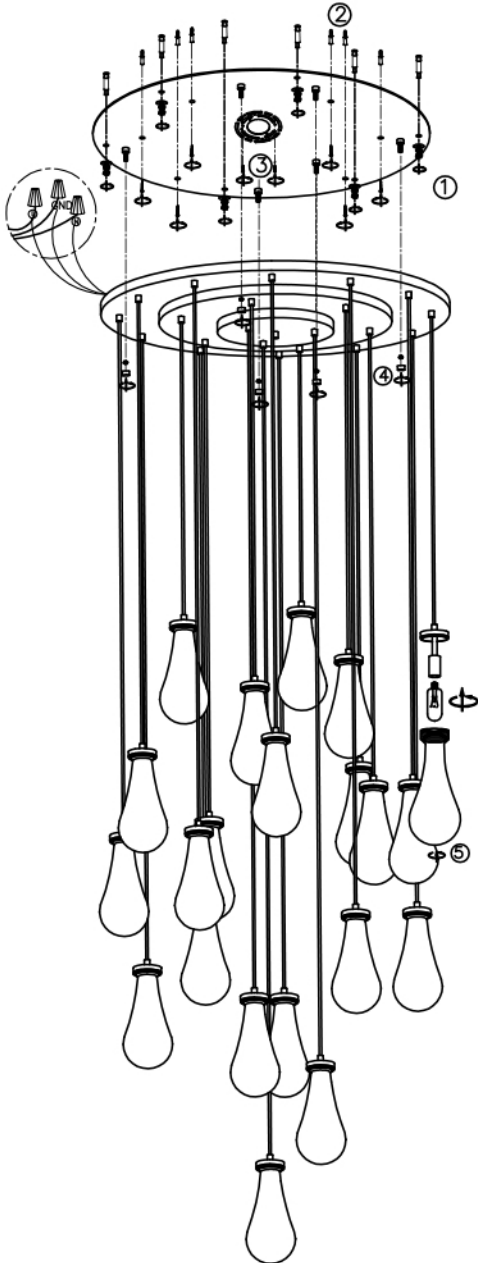


### Mounting Bracket Installation

Note: Must be installed by a licensed electrician

"Warning: This is a heavy ceiling light fixture and requires a sturdy brace to support its weight. The drywall or plaster of the ceiling is not strong enough to support the weight of this fixture.

A wooden support brace must be added between ceiling joists that provides ample strength for mounting this light fixture. See Below."

\*SECURE ALL CORNERS TO SOLID WOOD BEAMS AND/OR JOIST BEAMS WITH THE HEAVY DUTY WOOD SCREWS (Included)

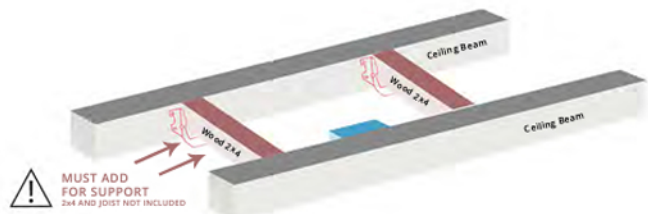

**Total Weight: 120 lbs**

Note: Must be installed by a licensed electrician

#### SAFETY PRECAUTIONS:

1. TURN OFF ELECTRICAL POWER BEFORE STARTING INSTALLATION OF LIGHT FIXTURE.
2. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
3. CONNECT THE GROUND WIRE (BARE COPPER OR GREEN) FROM YOUR FIXTURE TO THE GROUND WIRE (BARE COPPER OR GREEN) OR GROUND SCREW IN THE ELECTRICAL OUTLET BOX.
4. CLEAN CRYSTAL WITH WATER ONLY.



- This fixture **MUST** be installed by a licensed electrician.
- Read & understand the entire installation sheet.
- DO NOT substitute any parts, leave parts out, or use parts that are worn out or broken.
- Suitable for the use of 110-130V and 60Hz
- Please wear gloves during installation to avoid damage to the plating.
- Must be installed in a fixed location and be checked yearly.
- Please turn off the light source with a soft cloth as cleaning with a detergent is prohibited.

1. Ensure main supply is switched off.

2. Put the setscrews (1) into the hole on the wall and tighten with ring and nut.

3. Put the anchoring into the hole on the wall, have the screw (2) through the mounting bracket, and tighten with anchoring.

4. Have the mounting screw (3) through the mounting bracket and screw into octagon box.

5. Connect the wires using wire nuts, tight mounting bracket and back plate using nuts (4).

6. Install the light bulb (not provided) to the socket.

7. Install the glass shade.

